About Us

Cadig

What We Do

Cadig Inc. is dedicated to providing people effective & efficient CAD Add-ons.

Our Team

The engineers at Cadig, Inc. draw their experience with Autodesk, Inc.

We have years of experience working with AutoCAD. We understand it's limitations and provide solutions to improve your productivity.

In addition, we have partnership with architectural firms, engineering companies to ensure our products meet the requirements of the architectural, and engineering.

Company Introduction

Cadig, Inc. is established in 2003, and now it is in its first stage of development. It has about 9 employees.

With a network of strategic Independent software vendor (ISV) partners, distributors and resellers, and users in over 30 countries across the globe, Cadig is one of the world's most popular providers of professional CAD Add-ons software.

Contact

Sales Department: <u>sales@cadig.com</u> Support Department: <u>support@cadig.com</u> Website: <u>http://www.cadig.com</u>

We will respond your email within 1-2 business day(s).

System Requirements

CAD Platforms

- AutoCAD 2005 or higher and AutoCAD based products, such as Architectural Desktop, Map, Building System and Mechanical.
- AutoCAD LT 2009 or higher

Microsoft Excel 2000 or later

Installation and Registration

How to install Cadig software?

- 1. Quit all programs, especially AutoCAD (LT).
- 2. Double-click the installation application.
- 3. Follow the instructions on the screen.
- 4. After the installation, you can run AutoCAD (LT) to use it.

If you have installed other Cadig series applications, the installation application will recognize default destination path and finish installation without any instructions.

How to install Volume License?

Install the software on the computers based on the license number you purchased. Since only one copy of Product ID & Product Key for Volume License, so you don't need to enter different ones for each machine. Just use the same Product ID & Product Key for all computers.

How to upgrade from a previous version?

If you are upgrading from a previous version of Cadig products, just run the latest installation program to overwrite the old one. If it is a major upgrade, maybe you need to enter new license key. Write to support@cadig.com for your new license key (Including your old one).

I failed to install/load Cadig software. Why?

You must be "Administrator" to install and remove Cadig software. In Windows 2000/XP only "Power Users" & "Administrators" can use Cadig software.

How to register the Cadig software?

After you purchase the software, you will receive an email containing your License Certificate. The Certificate will contain your Product ID and Product Key.

The next step of the registration process is to authorize the software. This process will lock the software to an individual workstation.

To access the Registration screen:

- 1. On the **Cadig** menu in AutoCAD (LT), point to **AutoAttribute**, click **Register**.
- 2. Enter your Product ID & Product Key in the registry window Click **OK** button.
- 3. The application would instruct you whether your registration is successful or not.
- 4. If failed, take note of the following:
 - No mistype
 - Make sure of no SPACEBAR BLANKS at the beginning/end
 - Product ID/Key is case-sensitive
 - Product ID/Key is related to your CAD platforms and versions
 - Do not enter your Floating License Product ID/Key into Client software

After successful registration, all trial limitations would be immediately removed.

How to uninstall software?

- 1. Quit all programs, especially AutoCAD (LT).
- 2. Double-click the Add/Remove Programs icon in the Windows Control Panel.
- 3. Click Cadig AutoAttribute in the Currently installed program box, and then click the Change/Remove button.
- 4. Follow the instructions on the screen.

Or

- 1. Quit all programs, especially AutoCAD (LT).
- 2. Double-click the installation application.
- This installation application will automatically detect the corresponding application in local machine. 3. Follow the instructions on the screen to remove the software.
- I uninstall Cadig software. However I still get a AutoCAD (LT) Message "Menu load failed. File not found:C:\Program Files\Common Files\Cadig\Cadig2006\Cadig2006.(mnu/mns/mnc)" when I run AutoCAD (LT). How can I get rid of this?

This message will only occur the first time that AutoCAD (LT) has been run after uninstallation has taken place.

Operations

Export block attributes

1. Click Export Attribute 👫 on the AutoAttribute toolbar.

AutoAtt	ribu	te				×
S\$ 🚯	6 5	\$ \$	5	ಿ	P	?

2. On the Data Source page, select the current drawing or objects to extract the attribute values. Click Next.

ዾ Data Source	
 Data Source Current Drawing Select Objects Select Drawings 	Drawing Options Include Xrefs Include nested blocks Current space only
Drawing Folder	Add Remove Load List Save List
Options	Back Next Close

3. On the Attribute page, choose the blocks and the properties to export. Click Next.

Cadig

Attribute	X
Block Name AL AR AR AR AR AR AR AR AR AR	Category □ Position X □ Scale X □ Position Y □ Scale Y □ Position Z □ Scale Z □ Rotation □ Layer ✓ Attribute
Select All Clear All	 Display blocks with attributes only Display blocks currently in-use only
Options	Back Next Close

4. On the Preview page, click **Export** to export the attribute values to Excel or the AutoCAD native table.

A	Preview					×
	Α	В	С	D	E	~
	Block Name	Count	FJH	GSH	GYH	
	AL_JNHB	1	-1041	1083000	1009020100	
	AL_JNHB	1	-1032	1083000	8009620900	
	AL_JNHB	1	-102	1083000	8009620900	
	AL_JNHB	1	-101	1030982	8009620900	
	AL_JNHB	1	101	1083000	1009020100	
	AL_JNHB	1	102	4298001	1009020100	
	AL_JNHB	1	103	1083000	1009020100	
	AL_JNHB	1	104	1083000	1009020100	
	AL_JNHB	1	201	1083000	1009020100	
	AL_JNHB	1	202	4298001	1009020100	
	AL_JNHB	1	203	1083000	1009020100	
	AL_JNHB	1	204	1083000	1009020100	
	AL_JNHB	1	301	1083000	1009020100	
	AL_JNHB	1	302	4298001	1009020100	
	AL_JNHB	1	303	1083000	1009020100	
	AL_JNHB	1	304	1083000	1009020100	✓
[Show count c	:olumn 🔲 C	ombine identical il	iems Attribute	column sort: A ->	z 💌
[Show drawing	g column 🛛 🔽 Ir	iclude header H	leader for all bloc	ks 🔽	Export
						Export to AutoCAE
	Options			Back	Next	Export to Excel

5. If you export the attribute values to Excel, the handles of the attributes are saved to the comments of the cells. So please don't delete the comments of the cells in the exported Excel file.

Export attributes to existing Excel file

1. Start Excel and open your existing Excel file.

2. Click "Options..." in the **Preview** page before exporting the attribute values.

	AL_JNHB	1	103	1083000	1009020100	
	AL_JNHB	1	104	1083000	1009020100	
	AL_JNHB	1	201	1083000	1009020100	
	AL_JNHB	1	202	4298001	1009020100	
	AL_JNHB	1	203	1083000	1009020100	
	AL_JNHB	1	204	1083000	1009020100	
	AL_JNHB	1	301	1083000	1009020100	
	AL_JNHB	1	302	4298001	1009020100	
	AL_JNHB	1	303	1083000	1009020100	
	AL_JNHB	1	304	1083000	1009020100	×
	Show count o	column	Combine identical i	tems Attribute	e column sort: A	→Z V
	Show drawing	g o lumn	✓ Include header H	leader for all bloc	:ks 💌	Export
C	Options			Back	Next	Close

3. Select "Use active workbook" and enter the correct start column and row.

Ex	port Options	
ſ	Excel	
	🔿 Create new workbook	⊙ Use active workbook
	One sheet for each block	 One sheet for all blocks
	Start column: A	Start row: 1
	Apply border	Merge block name cell
	ОК	Cancel

Upload Attribute Values to Exported Workbook

1. Open the workbook exported by AutoAttribute.

2. Click **Upload to Excel** son the **AutoAttribute** toolbar.



3. AutoAttribute will update the attribute values of the current drawing to the active workbook.

Import block attributes

- 1. Start Excel and open the output file.
- 2. Click Import Attribute Store on the AutoAttribute toolbar.

AutoAttribute					×
63 🚯 65 66	5	Ъ	1	P	?

3. Check the start row, start column, worksheet and workbook. Click **OK**.

4. If you don't want to import the properties (for example, Position X, Scale X, Rotation, Layer), please check **Ignore Property**.

Import 🔀						
Active sheet only O Entire workbook						
Start Column: A Start Row: 1						
Ignore property						
Workbook: Book1						
Worksheet: Sheet1						
Update the current drawing only						
Ignore the drawing paths of the attribute values						
Save the link of the Excel file to the drawing.						
OK Cancel						

5. Because the Excel workbook or worksheet maybe contains the attribute values of other drawings, please check **Update the current drawing only if** you just need to update the current drawing.

6. When exporting the attribute values, the drawing path will be written to the workbook. And when importing the modified attribute values from the exported Excel workbook, AutoAttribute will compare the written drawing path to the current drawing path so that it can confirm if the attribute values are for the current drawing.

So if you move the drawing to another folder and try to import the modified attribute values, maybe the import function doesn't work. If the workbook or worksheet just contains the attribute values of the current drawing, you can check Ignore the drawing paths of the attribute values.

Note: The **Ignore the drawing paths of the attribute values** is available only when updating the current drawing only.



7. If **Save the link of the Excel file to the drawing** is selected, the Excel file path will be saved to the drawing. If you turn on auto-update, the attribute values will be updated when the drawing is opened.

Import block attribute values by a key attribute

1. This function doesn't need the handle of the attribute. It just needs an attribute containing the unique values. You can use this function in the following cases.

1) You exported the values of one attribute to Excel and added the values of other attributes. Then you want to import the added values into the drawing.

2) Your co-worker made the values of the attributes in Excel and you want to import the values into the drawing.

- 2. Open the Excel file containing the attributes names and values.
- 3. Click Import by Key Attribute 10% on the AutoAttribute toolbar.

Aut	oAtt	ribu	te				×
83	*	Ø\$	S	5	Ф	P	?

Import Attribute Values by Key Attribute	
Excel	Drawing
Workbook: D:\Demo\Book1.xlsx	Block Name:
Worksheet: Sheet1	Key Attribute Tag:
Selected Rows Only	 Current Drawing Select Drawings
O Header Row for Attribute Tags:	Add Remove
 Specify Columns for Attribute Tags 	Drawing Folder
Column: 💽 Attribute Tag:	
Add Remove	
Column Attribute Tag	
Save Settings to File Load Settings from F	Tile Start Cancel

4. Specify the header row for the tag of Attributes. The header should contain the tag and property names.

💿 Header Rov	v for Attribu	ute Tags:	1	~
🔘 Specify Coli	umns for At	tribute Tag	js	
Column:	~	Attribute	Tag:	

Note: if you select "Header Row for Attribute Tags", the header row must contain the tag name of the **key** attribute.

If you don't have a header row containing the tag and property names, you can specify the columns for the tag names one by one.

O Header Row for Attribute Tags: 1
• Specify Columns for Attribute Tags
Column: E 🗸 Attribute Tag: Tag 1
Add Remove

Note: if you select "Specify Columns for Attribute tags", you must specify the column of the key attribute.

5. Select the block and enter the key attribute name.

Drawing		
Block Name:	Block 1	*
Kev Attribute Tag:	Kev Attribute Name	~

6. If you want to update multiple drawings, you can add the drawings to the drawing list.

O Current Drawing	Select Drawings
Add	Remove
Drawing	Folder

7. Click "Start".

Insert block references from Excel

- 1. Open the Excel file containing the block names and the information of the block references.
- 2. Click Import blocks 🖾 on the AutoAttribute toolbar.

AutoAttribute X		
NS 👫 NS NS 🖙 🐁 😁 🔑 😰		
Insert / Update Blocks		
Workbook:		
Worksheet: Selected Rows Only		
Block Name Column:		
⊘ Header Row for Attribute Tag:		
Specify Columns for Attribute Tags / Dynamic Properties		
Column: Attribute Tag / Dynamic Property:		
• •		
Add Remove Save List Load List		
Column Attribute Tag		
B Position X		
C Position Y		
D Position Z		
Update inserted blocks Insert blocks Cancel		

3. Specify the column for the block name.



4. Specify the header row for the tag of Attributes. The header should contain the tag and property names.

• Header Row for Attribute Tags:	1 💌		
O Specify Columns for Attribute Tags			
Column: Attribut	e Tag:		

If you don't have a header row containing the tag and property names, you can specify the columns for the tag names one by one.

◯ Header Row for Attribute Tags: 1			
 Specify Columns for Attribute Tags 			
Column: E 🔽 Attribute Tag: Tag 1			
Add Remove			

5. Click "Insert blocks" or "Update inserted blocks".

Update attributes automatically when opening drawing

1. When importing the attribute values, please select Save the link of the Excel file to the drawing.

Import				×
 Active sheet 	only	🔵 Entire w	orkbook	
Start Column: 🛛	\	Start Row:	1	
🔲 Ignore prope	rty			
Workbook: Bo	ok1			
Worksheet: Sh	eet1			
Update the current drawing only				
Ignore the drawing paths of the attribute values				
Save the link of the Excel file to the drawing.				
0	к	Cance		

2. Click Attribute Links Son the AutoAttribute toolbar.



3. Select Update the linked attribute values automatically when opening the drawing in the Auto-Update Options section.



Links		×
Manage Links ———		_
Drawing	Linked Excel File	
		_
Add Drawing:	Remove Drawings Break Links	
Excel Workbook: Update Links		
Auto-Update Options		
Update the linked attribute values automatically when opening the drawing.		
	OK Cancel	

Manage the linked Excel file in the drawing

1. Click Attribute Links Son the AutoAttribute toolbar.



2. Then you can Add Drawings to break and update the linked Excel file in the Manage Links section.

Link	S	
Mar	nage Links	
	Drawing	Linked Excel File
	d:\demo\autoattribute\drawing1.dwg d:\demo\autoattribute\drawing2.dwg d:\demo\autoattribute\drawing3.dwg	D:\John\My Documents\Book23.xlsx D:\John\My Documents\Book23.xlsx D:\John\My Documents\Book23.xlsx
	u. tuenio tautoattibute turawings.uwg	D. Wohn My Documents (DOK23.AISA
Add Drawings Remove Drawings Break Links		
	Excel Workbook:	Update Links



Video Demo

Please go to <u>http://www.cadig.com/demo</u> for online video Demo training.



FAQ

Support

Cadig Service

Sales Department: <u>sales@cadig.com</u> Support Department: <u>support@cadig.com</u> Website: <u>http://www.cadig.com</u>

We will respond your email within 1-2 business day(s).

Request Software License Certificate by FAX

Fax: +1-415-532-1911 (For Software License Certificate Request Only)

Please send a fax to us to request your Software License Certificate in case you do not receive it via email within 48 hours (Maybe there is something wrong with the connection between our email servers).

Please indicate the following items in your fax:

Sharelt Ref.No.: e.g. 11822454 Cadig Product Name: e.g. AutoAttribute for AutoCAD (LT) CAD Platform: e.g. AutoCAD (LT) 2004/MicroStation V8.5 License Type: e.g. Standalone/Multi-Seat Standalone Number of License: Email: Fax: Other Comments:

Once your order info is verified, we will fax the License Certificate to you.

share-it! Service

We choose share-it! as our e-commerce outsourcing partner. share-it! is responsible for Customer Care Center as a partner of Cadig, Inc.

If you have ordered software and would like to view your order data, or you have questions about orders, payments, or shipment by our partner share-it!, you can find answers in <u>Customer Care Center</u>.

If you have ordered software and would like to view the status and details for all your orders, please login <u>My</u> <u>Account at Customer Care Center</u>.

United States

(Language: English)

share-it! 9625 West 76th Street, Suite 150 Eden Prairie, MN 55344, USA (Attn: A/R Department/Order) Tel: +1.952.646.5747 (for calls from outside the U.S.) +1.800.903.4152 (for calls from inside the U.S.) Fax: +1.952.646.4552

Germany/Europe (Languages: German/English/French/Italian/Spanish/Portuguese)

share-it! - element 5 AG Vogelsanger Str. 78 50823 Cologne, Germany (Attn: A/R Department/Order) Phone: +49.221.31088.20 Fax: +49.221.31088.29